

SOFA-CUM-BED FITTING (CLICK) Design Reg. 194231/04



Special Features

- Specially designed Sofa cum bed fitting click to convert your sofa into bed.
- Max. back rest size - 600 x 1830mm & Max. seat size - 600 x 1830mm


Specifications

Code No.	Finish
SCBC1	BL



Fitting Instructions

1. Bring Sofa cum Bed fittings into bed position (Refer Fig. 3. 2).
2. Fit base bracket on bottom frame keeping distance of 60mm from centre of frame. Screw the side of frame using No. 12x40mm pan head self tapping screws (Refer Fig. 3).
3. Keep seat & back rest in the centre of bottom frame and mark screw holes from the seat and back rest brackets, using No. 12x40mm pan head self tapping screws, fit into position (Refer Fig. 3).
4. Sofa cum bed is ready for use.
5. For converting from sofa to bed & bed to sofa refer sketches shown.

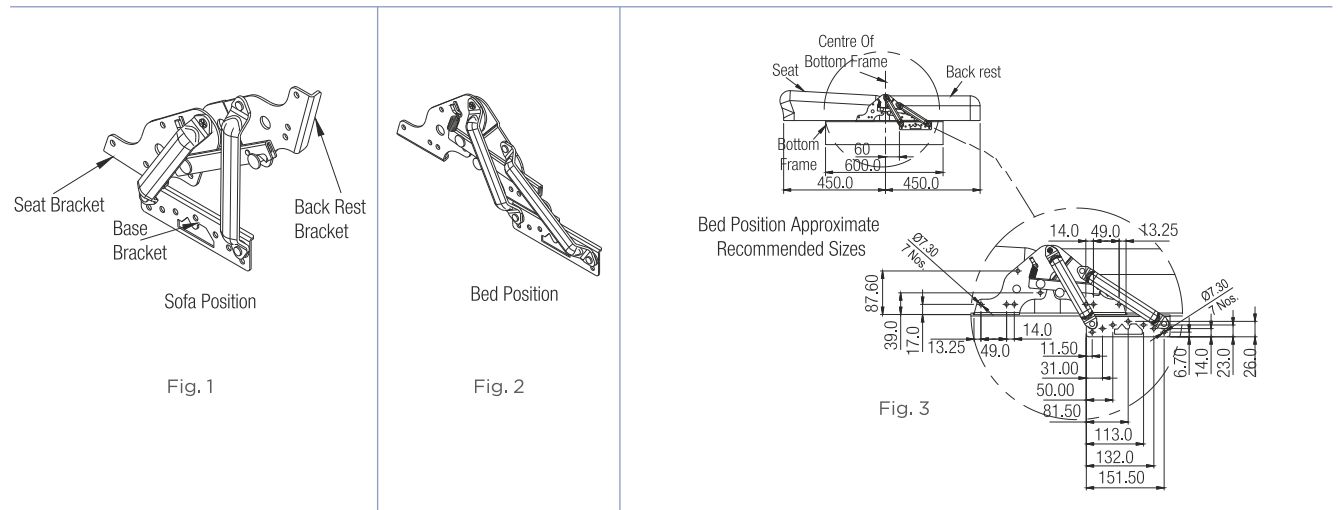

Push Seat Further Till Clicking Sound Is Heard

